

ZONE PROGRAMMING

Add	Description	Default Zone																			
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
10	Entrance zone. Zone led on mean the zone is assigned as this type of zone.	*000	0000	0000	0000	0000	0000														
11	Internal Delay zone. Zone led on mean the zone is assigned as this type of zone.	0*00	0000	0000	0000	0000	0000														
12	Internal zone. Zone led on mean the zone is assigned as this type of zone.	0000	0000	0000	0000	0000	0000														
13	Instant zone. Zone led on mean the zone is assigned as this type of zone.	00**	***0	****	****	****	****	***0													
14	24 Hour zone. Zone led on mean the zone is assigned as this type of zone.	0000	000*	0000	0000	0000	0000														
15	Fire zone. Zone led on mean smoke detector is connected to this zone.	0000	0000	0000	0000	0000	0000														
16	Silent zone. Zone led on mean that zone will not active the siren when it is trigger. But it will still active all telephone features.	0000	0000	0000	0000	0000	0000														
17	Normally Open zone. Zone led on mean normally open sensor is connected to this zone.	0000	0000	0000	0000	0000	0000														
18	Zone responds. On mean slow respond zone and off mean fast respond zone.	0000	0000	0000	0000	0000	0000														
19	Intelligent zone group 1. On mean zone is program to the intelligent zone group 1.	0000	0000	0000	0000	0000	0000														
20	Intelligent zone group 2. On mean zone is program to the intelligent zone group 2.	0000	0000	0000	0000	0000	0000														
21	Zone Partition 1. On mean zone is assigned to partition 1.	****	****	****	****	****	****	****													
22	Zone Partition 2. On mean zone is assigned to partition 2.	0000	0000	0000	0000	0000	0000														
23	Auto reset zone. On mean the zone will be restore after the bell time in [44].	****	****	****	****	****	****	****													
24	CMS report zone. On mean zone trigger will report to CMS.	****	****	****	****	****	****	****													
25	Partition 1 user. On mean user has access right to partition 1. (User 1 to 8 only)	****	****	****	****	****	****	****													
26	Partition 2 user. On mean user has access right to partition 2. (User 1 to 8 only)	0000	0000	0000	0000	0000	0000														

Ps. Zone 20 for auto gate. When auto gate trigger, keypad buzzer on after 1 min. if not close the auto gate within 5 min, the personal call out to users.

Add	Description	Default Zone 1 2 3 4 5 6 7 8
30	CMS reporting Zone led 1 on mean: Report Panic. (activated keypad panic button) Zone led 2 on mean: Report Duress. (user #8 will become duress code) Zone led 3 on mean: Report Arm/Disarm. Zone led 4 on mean: Report AC Loss. Zone led 5 on mean: Report enter/exit programming mode. Zone led 6 on mean: Report telco fault. Zone led 7 on mean: Report Bypass. Zone led 8 on mean: Report Battery low.	**** **0
31	Communicator Setting 1 Zone led 1 on mean: Enable personal reporting. Zone led 2 on mean: Enable CMS reporting. Zone led 3 on mean: Enable progress tone monitoring on fix line. Zone led 4 on mean: Enable fix line. Zone led 5 on mean: Enable GSM. (only available in GSM version) Zone led 8 on mean: Enable battery low trouble warning on keypad.	*00* 0000
32	Communicator Setting 2 Zone led 1 on mean: Enable AC Loss personal reporting. Zone led 2 on mean: Enable Battery low personal reporting. Zone led 3 on mean: Double ring answering. Zone led 6 on mean: Enable double CMS reporting. (only available in GSM version) Zone led 7 on mean: Enable SMS reporting. (only available in GSM version) Zone led 8 on mean: Enable SMS extended reporting. (only available in GSM version)	*000 0000
33	System Option Zone led 1 on mean: Keypad buzzer on during entry delay. Zone led 2 on mean: keypad buzzer on during exit delay. Zone led 3 on mean: Short beeping during delay. Zone led 4 on mean: DTMF dialing else pulse dialing. Zone led 5 on mean: Enable one key arming using button H or A. Zone led 6 on mean: Enable keypad panic button P. Zone led 7 on mean: Enable RF remote control arming.	**** **0

Number Programming

Add	Description	Default Value
40	Entry timer partition 1. From 0 to 255 sec.	040
41	Entry timer partition 2. From 0 to 255 sec.	040
42	Exit timer partition 1. From 0 to 255 sec.	120
43	Exit timer partition 2. From 0 to 255 sec.	120
44	Bell timer for auto reset zone. 0 to 255 minute.	005
45	Fast respond timer. [0 to 255] * 1.6ms.	008
46	Slow respond timer. [0 to 255] * 1.6ms.	015
47	Intelligent zone counter 1. 0 to 255 times. If counter exceed, intelligent zone group 1 trigger.	002
48	Intelligent zone counter 2. 0 to 255 times. If counter exceed, intelligent zone group 2 trigger.	003
49	Intelligent zone reset timer 1. 0 to 255 times. Intelligent zone group 1 counter reset timer.	010
50	Intelligent zone reset timer 2. 0 to 255 times. Intelligent zone group 2 counter reset timer.	030
51	PGM 1 (See PGM programming sheets)	129
52	PGM 2 (See PGM programming sheets)	129
53	PGM 3 (See PGM programming sheets)	129
54	PGM 4 (See PGM programming sheets)	129
55	PGM 5 (See PGM programming sheets)	129
56	Keypad lock digit. 0 to 255 times of password error before keypad lock. (Prevent password guessing on keypad).	012
57	Keypad lock time. 0 to 255 second keypad lock time.	060
58	Communicator Dialing time. 0 to 255 second. Specified the time to wait for the user answer during personal reporting.	040
59	Communicator Idle time. 0 to 255 second. Specified the time to wait for a key press before auto hang-up during personal reporting.	120
60	Communicator Dial loop. Number of time to dial on each telephone number. (For both personal and CMS reporting).	010
61	Answer ring. Number ring to wait before answer call. 0 to 255 ring. (Feature available with the voice card module only).	008
62	Communicator Password Error auto hang-up. Number of error password digit is allowed to key in before communicator auto hang-up. (Prevent password guessing through phone).	014
63	CMS Periodic Report. 001 to 255 hour. (000 mean disable)	024

Other Programming

70	CMS Account number 1. 4 digits Contact ID user code.	0000
71	CMS Account number 2. 4 digits Contact ID user code.	0000
72	CMS Phone number 1. Maximum 15 digits. P for pause 2 seconds. Ended phone number with #.	Nil
73	CMS Phone number 2. Maximum 15 digits. P for pause 2 seconds. Ended phone number with #.	Nil
74	Area Code or Prefix. Maximum 5 digits. P for pause 2 seconds. Ended phone number with #.	Nil
75	Reserved	000
76	Changed Installer code. The 4 digit installer code must be key in 2 times. If both installer codes are different, it will not be save.	1397
90	Firmware version. Display Firmware version.	
97	Reset SIM card SMS. Reset SIM card SMS to default. (Only available in GSM version)	
98	Reset user code. Reset all user code.	
99	Reset Panel. Reset all user code and programming setting except installer code.	

PGM definition

PGM Definition Value

Value	Description
000-019	Follow zone open. Enable 24hr without auto off feature. E.g. 000 (follow zone 1). 001 (follow zone 2) etc. Suitable for indoor lightning that need to be auto on all time and turn off manually. E.g. Office with low natural light, turn on light or air condition automatically when PIR detect movement in the morning and manually off after office hour.
020-039	Follow zone open. Enable 24hr with auto off feature. (User programmings address 49). Suitable for indoor lightning that need to be auto on all time and with energy saving. E.g. Store room light.
040-059	Follow zone open. Enable during night mode without auto off feature. Suitable for outdoor lightning that need to be auto on during night mode and turn off manually. E.g. Shop with strong natural light, turn on automatically when PIR detect movement during night time and manually off after business hour.
060-079	Follow zone open. Enable during night mode with auto off feature. (User programmings address 49). Suitable to act as sensor light for indoor and outdoor. E.g. Car porch light, living hall light etc.
080	Follow Timer 1 (user programming address 39 & 40).
081	Follow Timer 2 (user programming address 41 & 42).
082	Follow Timer 3 (user programming address 43 & 44).
083	Follow Timer 4 (user programming address 45 & 46).
084	Follow Timer 5 (user programming address 47 & 48).
085	Follow Entry Exit time. Enable 24hr without auto off feature. E.g. Office with low natural light that can be turn on upon main door open and turn off automatically after system arm.
086	Follow Entry Exit time. Enable 24hr with auto off feature. E.g. Staircase light for office that can be turn on automatically upon main door open for entry illumination and turn off automatically for energy saving. After office hour, upon system arm will turn on automatically for exit illumination and auto off after next timer expired.
087	Follow Entry Exit time. Enable during night mode without auto off feature. E.g. Living hall light with strong natural light that is only necessary during night mode, can turn on automatically during entry and stay on until user turn off manually. Upon system arm during night time, will turn on until exit timer expired.
088	Follow Entry Exit time. Enable during night mode with auto off feature. E.g. Car porch light that turns on during entry and exit and turns off automatically.
089-108	Follow zone trigger. E.g. Perimeter sensor (silent mode sensor) triggers warning light or buzzer.
109-128	Follow zone trigger. Pulse signal. E.g. DVR channel switching.
129	Manual on/off only.
130	*Activate when fully arm. Cannot turn on/off manually.
131	*Activate when trouble condition exist. Cannot turn on/off manually.
132	*Activate when zones trigger, auto off some time after system disarm (user programming address 49). Cannot turn on/off manually while zone still trigger.
133	*Activate when zones trigger, off after disarm. Cannot turn on/off manually.

Ps.

- For timer 1 only available for PGM 1.
- For timer 2 only available for PGM 2.
- For timer 3 only available for PGM 3.
- For timer 4 only available for PGM 4.
- For timer 5 only available for PGM 5.

User Programming

Add	Description	Default Value
30	Current Time. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330.	-
31	Current Day. Must key in 4 digits. 2 digits for day and last 2 digits for month, e.g. for 1st of May, key in 0105.	-
32	Current Year. Must key in 4 digits, e.g. 2011.	-
33	Auto Arm Time for partition 1. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
34	Auto Disarm Time for partition 1. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
35	Auto Arm Time for partition 2. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
36	Auto Disarm Time for partition 2. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
37	Night mode begin Time. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
38	Night mode end Time. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
39	PGM 1 On Timer 1. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
40	PGM 1 Off Timer 1. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
41	PGM 2 On Timer 2. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
42	PGM 2 Off Timer 2. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
43	PGM 3 On Timer 3. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
44	PGM 3 Off Timer 3. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
45	PGM 4 On Timer 4. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
46	PGM 4 Off Timer 4. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
47	PGM 5 On Timer 5. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
48	PGM 5 Off Timer 5. 24hr format HHMM Must key in 4 digits, e.g. for 11:30pm, key in 2330. To disable this timer key in 9999.	9999
49	PGM Auto Off Timer. From 1 to 255 minute.	005