

# Defender End-User Operation Manual

## 1. Arming

Please check the zone 1 to zone 8 lights is disappear before arming.

- Press [ **4 Password** ], alarm will be arm after 60sec.
- Or press and hold [ **H** ] key in 3sec , the alarm will automatic armed.

## 2. By Pass

When the zone failure (zone number light up, it doesn' t disappear)

- Press [ \* ] + [ **4** ] + [ **4 Password** ] + [ **Press the number you want to bypass** ] + [ # ]
- Re-activate the alarm

## 3. Disarm

- Press [ **4 Password** ], the alarm will disarmed.

\*\*when the alarm is triggered, Press [ **4 Password** ] to stop the siren.

=====

## Setting Defender Alarm

### 4. Change Password

- Press [ \* ] + [ **6** ] + [ **4 Old Password** ] + [ **0** ] + [ **4 New Password** ] + [ **4 New Password again** ] + [ # ]

### 5. Change Phone Number

- Press [ \* ] + [ **7** ] + [ **4 Password** ] + [ **1** ] + [ **Enter 10 digits ex: 0123456789** ] + [ # ]